


# *EV Source LLC*

<http://www.evsource.com>

## Vacuum Reserve System Part #310-VACR-BL

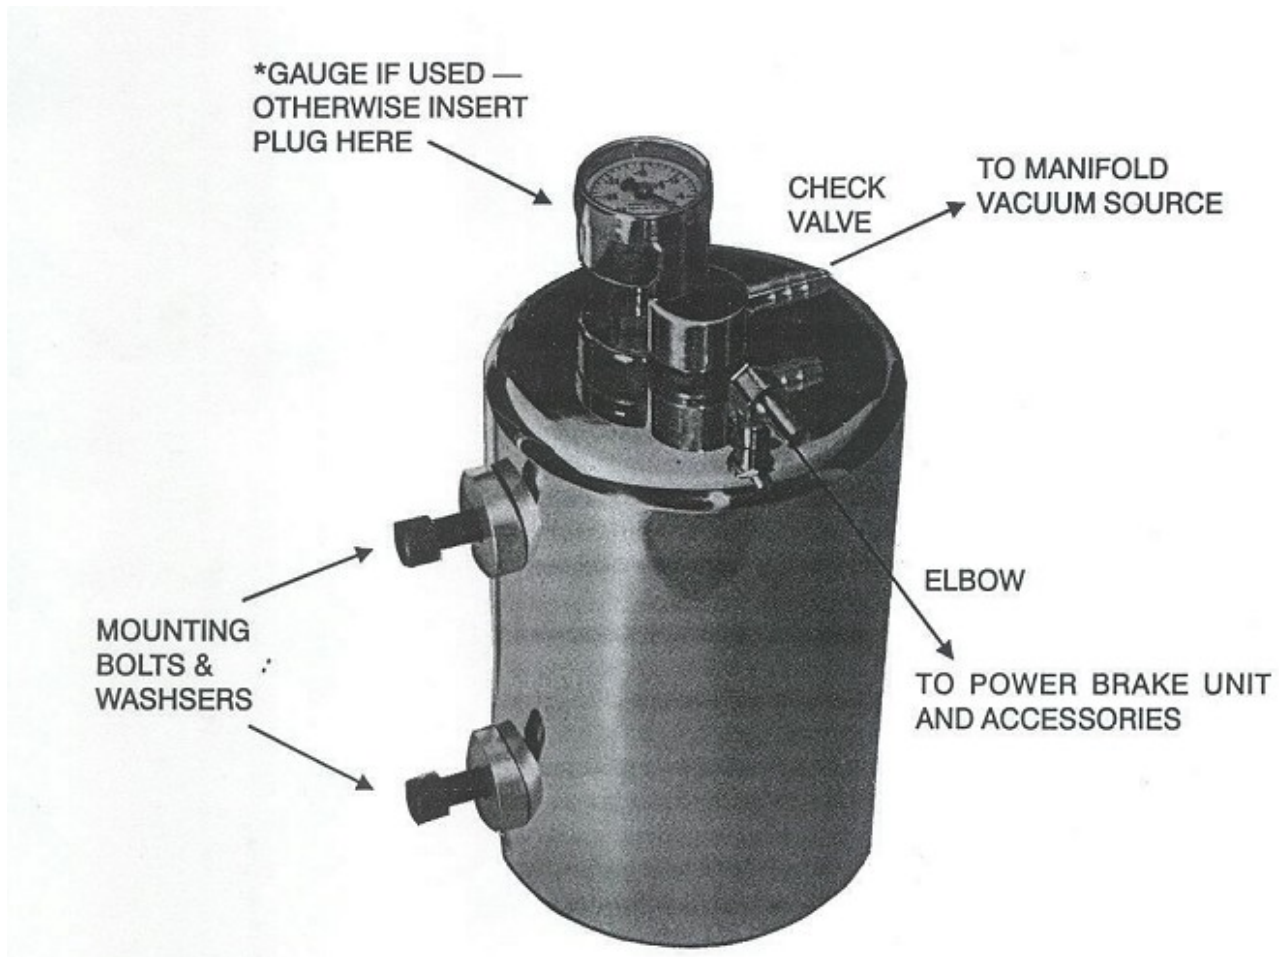

### Notes:

1. Use teflon tape on all pipe threads
2. Use power brake vacuum hose only
3. Verify that brake vacuum assist works properly before moving vehicle
4. Be sure to install elbow before check-valve

\* GAUGE SOLD SEPARATELY UNDER PART NUMBER 311-VACG-1. IF AUTOMATIC SWITCH IS USED (P/N 131-PMF-4200-X30), INSTALL HERE.